



kitsound.co.uk



JB. 3208 / Made in China. © KitSound™ 2014. Christchurch, Dorset. BH23 4FL

ks™

KITSOUND

REVIVE
DAB/FM ALARM
CLOCK RADIO

USER MANUAL





We are craftspeople. We are musicians. We are KitSound™
And we all commit ourselves to achieving one shared goal: Bringing people closer to their music. By truly understanding music we stay true to its craft. Pure, rich, incredible sound. We'll settle for nothing less.

At KS we believe your music deserves to be showcased on great quality products that don't cost the earth. We might not all share the same taste in music (the ferocious disputes on music forums prove that), but whether it's Irish folk, death metal or any number of obscure genres which seem to be multiplying by the minute, the artists responsible for connecting with you through their craft have bared their souls to do so. And we think that's worth celebrating.



Please read this manual carefully before use.


Box contents

- KS Revive DAB/FM alarm clock radio
- DC power adaptor
- User manual

Functions

On the top:

1. Previous station
2. Mode
3. Preset
4. Next station
5. Standby
6. Scan
7. Alarm 1
8. Alarm 2
9. Snooze/Sleep
10. Vol -
11. Enter
12. Vol +
13. Info

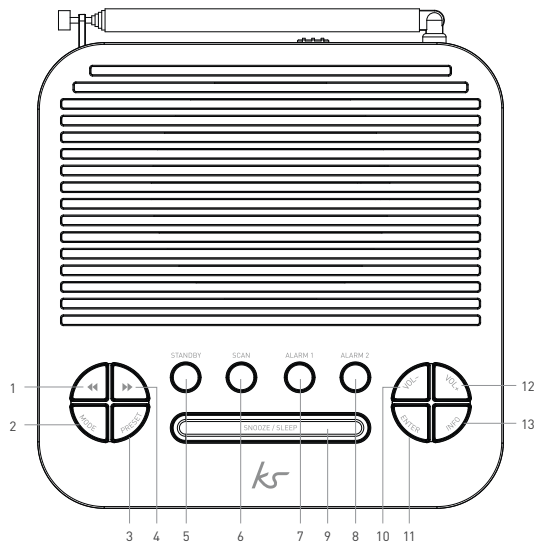

On the front:

 
 
14. Display

On the back:

15. OFF/ON
16. DC 5 V in
17. Headphone socket (output only)

On the bottom:

18. Battery cover
19. Antenna

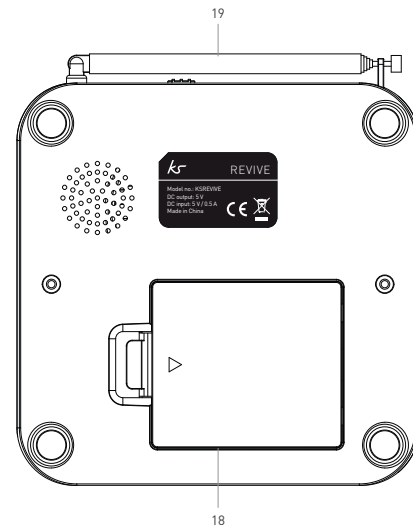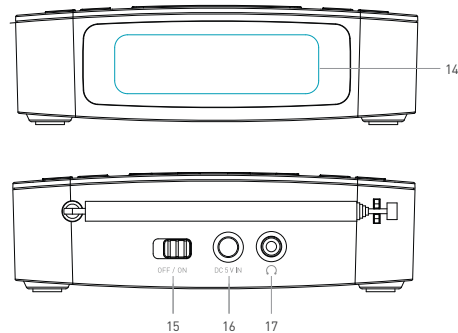

Instructions for use

Powering the Revive

The Revive can be powered by either of the methods below:

Mains power:

- Connect the DC jack to the back of the Revive
- Plug the mains plug into a mains socket and switch on
- Slide the OFF/ON switch on the back of the Revive to the ON position

Battery power (4 x AA):

- Remove the battery cover on the Revive
- Insert the 4 x AA batteries observing the correct polarity
- Replace the battery cover
- Slide the OFF/ON switch on the back of the Revive to the ON position

Using the Revive

Once the Revive has been switched ON, press the mode button to switch between DAB and FM modes.

DAB radio mode

When DAB radio mode is activated for the first time, a full scan will automatically commence. Please make sure the antenna is fully extended and the radio is positioned in a strong signal location. If no stations are found, try re-positioning the radio and doing another channel scan by pressing the 'Scan' button.

Select stations

To change stations, press the 'Next station' or 'Previous station' button then press the 'Enter' button.

Adjust volume

Press the Vol – or Vol + buttons to decrease or increase the volume respectively.

[continued...]

[...continued] DAB radio mode

Setting a preset

Up to 10 stations can be set under a preset. To store a radio station under a preset, press and hold the 'Preset' button. 'Preset # Save' will appear on the screen. Select the preset number by pressing the 'Next station' or 'Previous station' button and then press 'Enter' when done.

Recall a preset

Press (don't hold) the 'Preset' button. Select the preset number by pressing the 'Next station' or 'Previous station' button and then press 'Enter' when done.

View more information

You can view further information by pressing the 'Info' button several times. This information includes:

- DLS (Dynamic Label Segment – short text information broadcast with DAB audio)
- Frequency
- PTY (Program Type)
- Time/date

FM radio mode

FM radio mode receives analogue radio from the FM band. While FM radio is playing, the screen shows its frequency.

Scan FM station

The first time you select FM radio, it is set to the lowest frequency in the FM band.

In FM mode, press and hold the 'Next station' or 'Previous station' button to scan through the FM frequencies. Alternatively, press the 'Scan' button. The scan stops when a station is found.

Setting presets

This is the same as in DAB mode (see DAB mode preset instructions).

View more information

You can view further information by pressing the 'Info' button several times. This information includes:

- PS (Programme Service)
- PTY (Programme Type)
- Audio mode (Auto is default, switch between Auto/Mono by pressing 'Enter')
- Time/date

Setting the time

The time will automatically be set once DAB mode has been activated and a signal has been found.

Note: It is not possible to set the time manually.

Sleep timer

In DAB or FM mode, press the 'Snooze/Sleep' button to bring up the Sleep Timer. Keep pressing (not holding) the 'Snooze/Sleep' button to change the length of sleep time in 10 minute intervals. The maximum sleep time is 90 minutes. Once the sleep time has elapsed, the Revive will go into standby mode.

Alarm

To set the alarm, first you will need to put the Revive into standby mode. To do this, press the 'Standby' button in either FM or DAB mode. Then:

1. Press and hold the 'Alarm 1' button and the Alarm 1 settings menu will appear
2. Press the 'Next station' or 'Previous station' button to change the hours, then press the 'Alarm 1' button to confirm
3. Press the 'Next station' or 'Previous station' button to change the minutes, then press the 'Alarm 1' button to confirm
4. Press the 'Next station' or 'Previous station' button to change between FM, DAB or Buzzer, then press the 'Alarm 1' button to confirm

To set Alarm 2, follow the Alarm 1 instructions but press the 'Alarm 2' button instead.

To turn ON/OFF the alarms you have just set:

1. In standby mode, press (don't hold) the 'Alarm 1' or 'Alarm 2' button
2. Press the 'Next station' or 'Previous station' button to change between the Alarm being ON or OFF, then press the 'Alarm 1' or 'Alarm 2' button

When the alarm is sounding, it will start quietly and slowly increase in volume (FM and DAB).

To stop the alarm, you can either:

- Press 'Snooze/Sleep' to delay the alarm for another 9 minutes
- Press 'Standby' to stop the alarm

Note: The Revive must be left turned ON for the alarm to work.

Care for your Revive

Please DON'T

- Get the Revive wet
- Drop the Revive as this will invalidate your warranty
- Open up the Revive (except the battery cover). There are no user serviceable parts inside
- Use any other mains adaptor than the one supplied
- Expose the Revive to extreme temperatures or rapid changes of hot to cold or vice versa

Please DO

- Clean the Revive with a soft dry cloth and no detergents

Specifications

Audio output	2 W
Frequency response	125 Hz – 8 kHz
Frequency	87.5 – 108 MHz
Jack plug	3.5 mm
Media	FM & DAB
Clock	24 hour
Power supply	Batteries: 4 x 1.5 V AA Mains: DC 5 V / 800 mA

Troubleshooting

Factory reset

If for some reason the Revive is not working correctly or you want to reset all the settings, you can reset the Revive back to factory defaults. To do this:

1. In FM or DAB mode, press and hold the 'Mode' button
2. Press the 'Enter' button and the Revive will reset itself then restart

We hope you've now got all the information you need to get started, but if you're having problems with anything, please feel free to contact us at: support@kitsound.co.uk

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.